

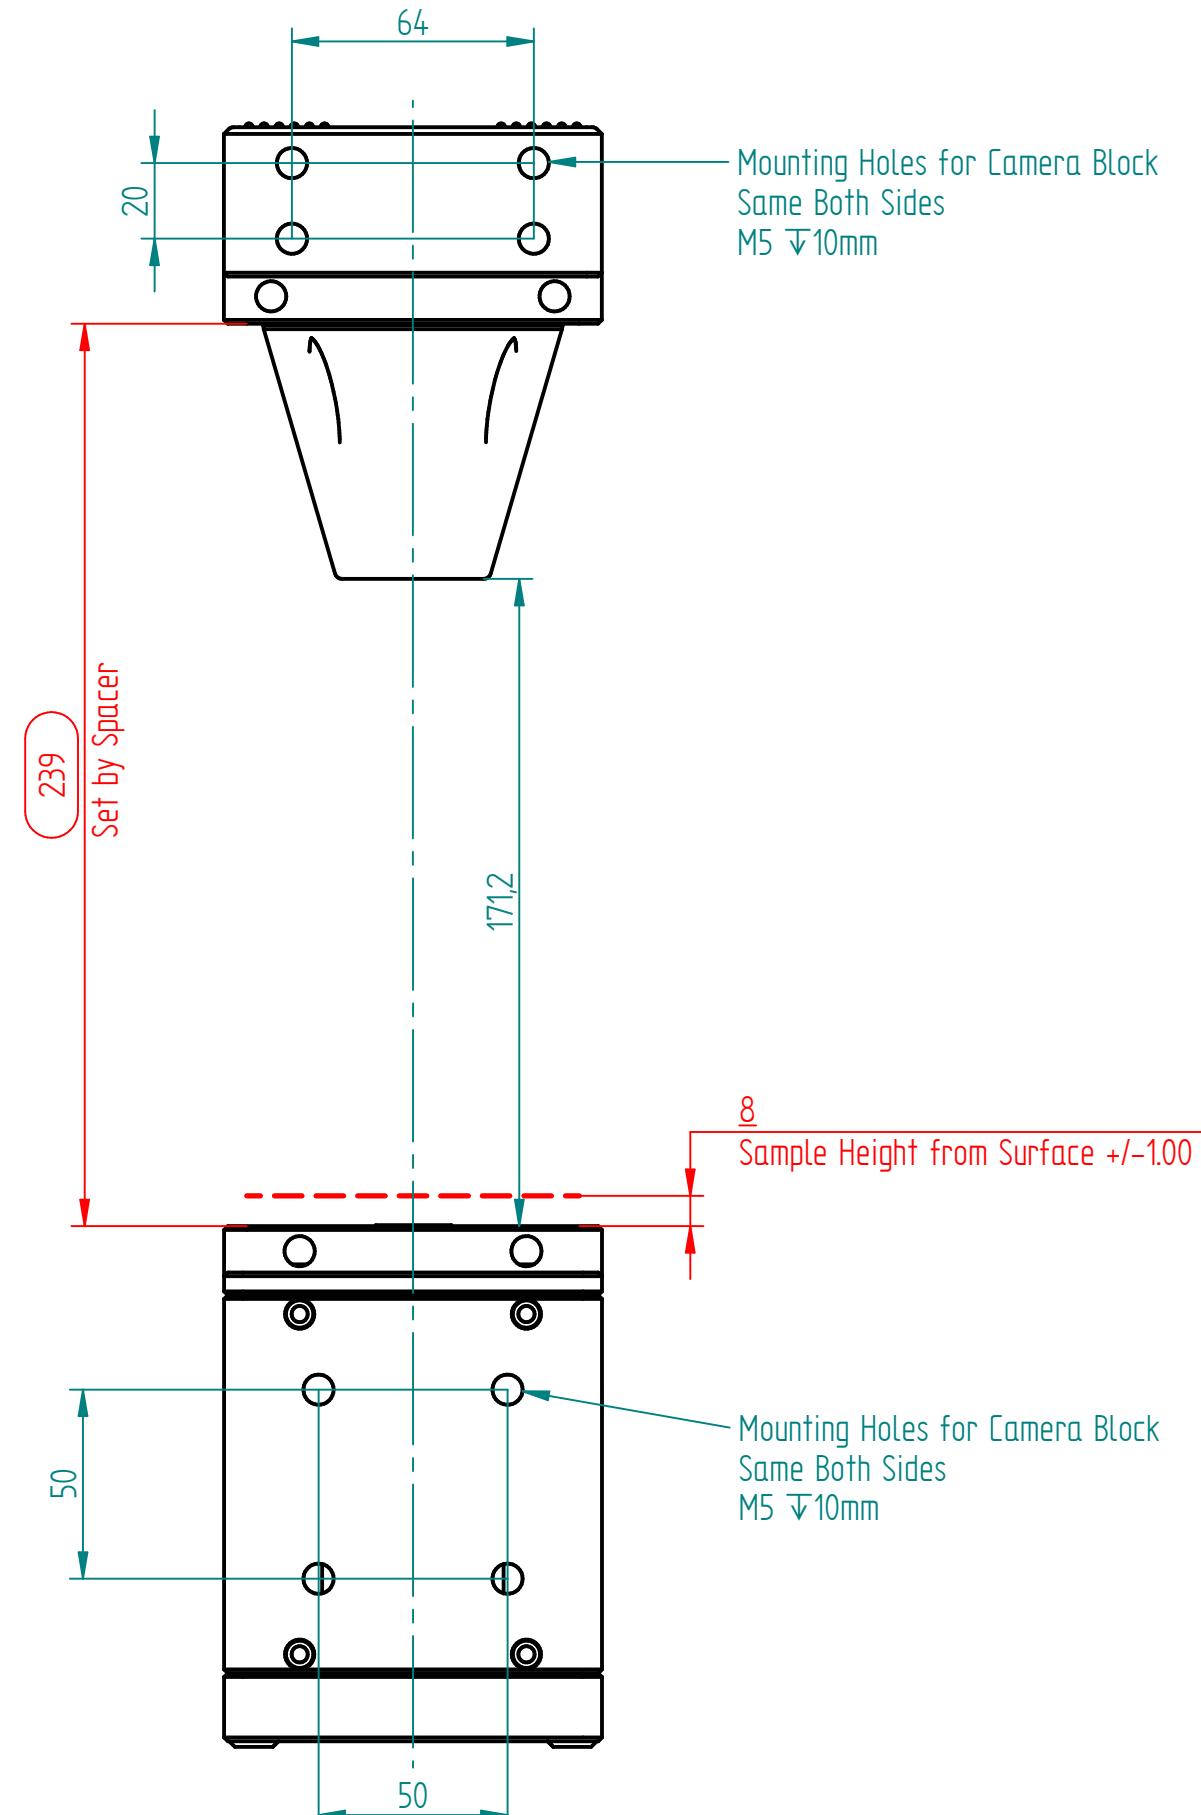
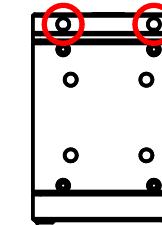
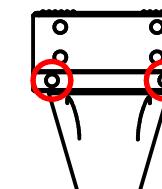


SIDE VIEW:

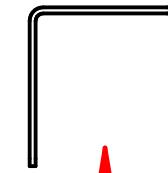

Spacer Removal

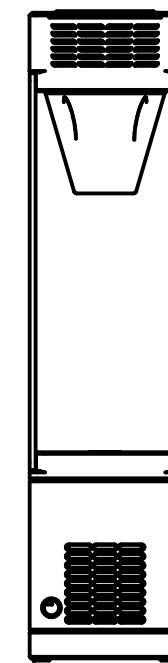

Ensure that you Remove the spacer in the correct Direction

Check:

- Ensure that the Instrument has been installed and secured before spacer removal
- Ensure that the 8 Screws have been removed before removing the spacer (RED circles, BOTH Sides).

NOTE: All Measurements given are in Millimeters



RHOPOINT
INSTRUMENTS