



[www.rhopointinstruments.com](http://www.rhopointinstruments.com)

✉ [sales@rhpointinstruments.com](mailto:sales@rhpointinstruments.com)

## **RHOPOINT** **MFFT - 90**

**Minimum Film Forming  
Temperature Bar**

- Paints and Coatings
- Adhesives

# Features



## Paints & coatings

The minimum film forming temperature of a paint or coating is the lowest temperature at which it will uniformly coalesce when laid on a substrate as a thin film.

The standard test for determining this temperature involves using an MFFT, as specified by such standards as ASTM D 2354 and ISO 2115. The design of the Rhopoint instrument is based directly on these standards.

## Adhesives

The MFFT of one-pack adhesives can be found in a similar way to paints and coatings. With two-pack adhesives, a strip of aluminium foil can be laid on the platen, to ease cleaning, before applying the adhesive.

Two-pack adhesives do not show an MFFT, but the minimum cure temperature can be found by scraping the sample with a spatula.

## Running

The desired temperature program is selected and the instrument allowed to reach thermal equilibrium. Tracks of wet test material are applied using a cube applicator, or spreader.

Once the material has dried or cured the result is visually apparent.

## Standard features

Standard model (MFFT-90) has ten temperature programs:

Program	0	1	2	3	4	5	6	7	8	9
Cool end (°F)	14	23	32	41	59	73	91	110	127	145
Warm end (°F)	45	55	64	73	91	122	140	158	176	194




# Minimum Film Forming MFFT Temperature Bar

Ensures your paint and coatings perform correctly.

The Rhopoint Minimum Film Forming Temperature Bar (MFFT) is used to determine the minimum film forming temperature and white point in paint and coatings such as water base coatings, polymer dispersions, synthetic latexes and emulsion.

The MFFT also tests adhesives temperature optimisation in such areas as coalescence of water-borne adhesives and minimum temperature for epoxy resin cure.

The instrument can be supplied with an optional results label printer. Recorded values include the time and date of the test and identified minimum film forming temperature. The printed label can be attached to retained sample bottles or job sheets.

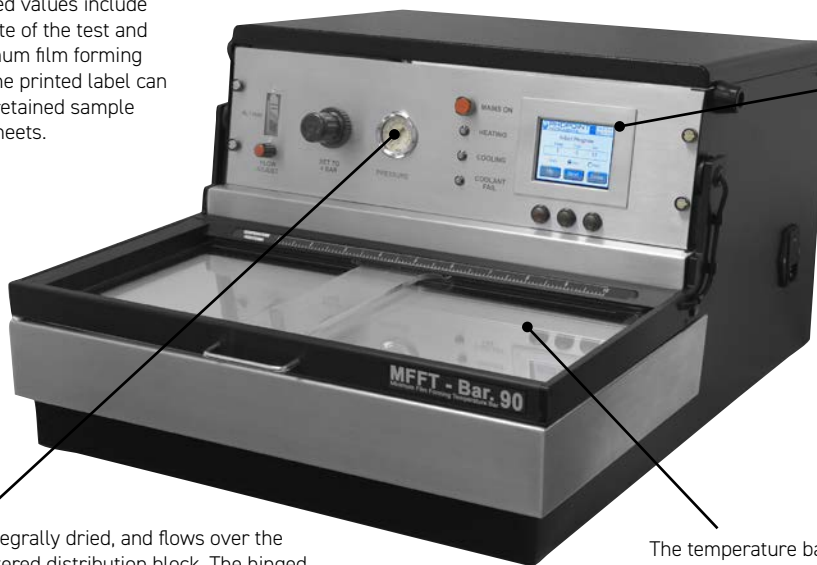

The new MFFT benefits from an easy to use touch screen interface, digital MFFT temperature calculation and output to handy results labels. These additions to the trusted Rhopoint MFFT make the instrument easier to operate with improved certainty of results.

Purge gas is integrally dried, and flows over the platen via a sintered distribution block. The hinged perspex cover provides thermal and atmospheric insulation whilst allowing constant visual inspection of a test. A cursor is moved to indicate the identified MFFT point; the instrument calculates and displays the temperature in the required units.

The temperature bar consists of a copper platen with an electronically imposed temperature gradient. Built in temperature sensors monitor the temperature across the platen, a graph of the gradient is displayed on the touch screen.



**Resins**



**Adhesives**



**Paints**

# Specifications

<b>Conforms to</b>	ASTM D 2354, ISO 2115
<b>Platen dimensions</b>	483mm × 235mm (L × W)
<b>Air</b>	4 l min <sup>-1</sup> @ 100 psig
<b>Water</b>	Mains pressure; gravity drain inlet temperature <15°C
<b>Mains</b>	110–120V AC or 220–240V AC
<b>Order code</b>	MFFT, -10°C to 90°C 230V - A1212-002 MFFT, -10°C to 90°C 115V - A1212-002/115
<b>Dimensions</b>	350mm × 550mm × 610mm (H × W × D)
<b>Weight</b>	38kg
<b>Packed weight</b>	53.7kg
<b>Packed dimensions</b>	590mm × 800mm × 690mm (H × W × D)
<b>Commodity code</b>	9027 8017

## Accessories

<b>Included</b>	<ul style="list-style-type: none"> <li>• Water connectors</li> <li>• Air connector</li> <li>• Spare silica gel</li> <li>• Manual</li> <li>• 75µm (0.003") cube applicator</li> </ul>
<b>Optional</b>	<ul style="list-style-type: none"> <li>• Chiller - Required when the temperature of the water supply to the instrument is &gt;20°C higher than the target temperature at the cold end of the selected range. e.g. Range 0, -10°C requires a water supply of no higher than 10°C. If this cannot be supplied then the chiller is required</li> <li>• Label printer</li> </ul>

**Free extended 2 year warranty:** Requires registration at [www.rhopointinstruments.com](http://www.rhopointinstruments.com) within 28 days of purchase. Without registration, 1 year standard warranty applies.



Label printer



Chiller





**TRY BEFORE YOU BUY**

**We offer one option for you to try out  
the MFFT before buying**

**1**

**Factory sample testing:** Send in samples of your material for testing and receive a comprehensive test report

[Arrange a demo](#)

**Ready to receive a quote?**

[Click here](#)

**Rhopoint Instruments Ltd**

Rhopoint House, Enviro 21 Park, Queensway Ave S,  
St Leonards, TN38 9AG, UK

T: +44 (0)1424 739 622

E: [sales@rhopointinstruments.com](mailto:sales@rhopointinstruments.com)

[www.rhopointinstruments.com](http://www.rhopointinstruments.com)

**Rhopoint Americas Inc.**

1000 John R Road, Suite 209, Troy,  
MI, 48083, United States

T: 1.248.850.7171

E: [sales@rhopointamericas.com](mailto:sales@rhopointamericas.com)

[www.rhopointamericas.com](http://www.rhopointamericas.com)

**Rhopoint Instruments GmbH**

An der Kanzel 2  
D-97253 Gaukönigshofen, Deutschland

T: +49 (0)9337 900-4799

E: [info@rhopointinstruments.de](mailto:info@rhopointinstruments.de)

[www.rhopointinstruments.de](http://www.rhopointinstruments.de)



All images are for illustrative purposes only

E&OE ©Rhopoint Instruments Ltd. May 2022

0852-03